

5. HOW TO OPERATE YOUR BOAT

TROUBLESHOOTING

PROBLEM

POSSIBLE CAUSE

NO DISPLAY
STAYS AT FULL
WILL NOT RESET

Terminals not connected or improper voltage
Indicator voltage different than batteries voltage
Indicator voltage different than batteries voltage or batteries not fully charged

RESET WITHOUT CHARGING BATTERIES
EMPTY TOO SOON

Not connected directly to batteries terminals
Indicator voltage different than batteries voltage or terminals not connected directly to batteries



DEFFECTIVE POWER LEVEL INDICATOR

If your battery power level indicator is defective, contact your nearest CEBC representative as soon as possible. We do not recommend using your Fantail 217 without a completely functional battery power level indicator. You risk becoming stranded in the middle of a body of water without power.

5.3 MAIN BREAKER

The main function of the Fantail 217 breaker is to protect the motor and the accessories, including the bilge pump and the navigation and cockpit lights, from electrical overload. To make a comparison with the computer world, we can say that the main breaker acts as a firewall, and protects the vital elements from overloading and burning out.

The breaker allows the operator to cut the energy to the motor. Your motor will not operate if the motor breaker switch is in the OFF mode.



BREAKER SWITCHES AND MOTOR BREAKER

Always turn the motor breaker switches OFF after docking your boat. Always make sure that the motor breaker switches are on the ON mode when you go out on the water. Please check your bilge pump and the navigation lights. If pump doesn't work, have it fixed before leaving. If navigation lights don't work, don't venture out at dark.

5.4 IGNITION SWITCH

Your Fantail 217 comes equipped with 1 ignition key that work like most other conventional propulsion systems. Insert the ignition key into the ignition switch and turn the key to the right. Your engine is then fed with electricity. The battery power level indicator will turn on automatically.

If the battery power level indicator does not turn on, consult the appropriate section of the Fantail 217 manual for the possible causes. Make sure that the Main Breaker is in the "ON" position.



SPARE SET OF KEYS

Keep one set of keys in a safe place. Purchase a floating key chain to make sure that you do not lose your ignition key in the water. If you lose both sets of ignition keys, a new ignition switch will have to be installed. Your warranty does not cover this type of mishap.