

3.3. Platform selection

If there is no free parking platform at level 0, the operator can call the free platform and allow the parking of the vehicle.

The parking platforms are called by the number, pressing the corresponding green section button. The parking platform numbers are located on the front and on both sides of each platform.



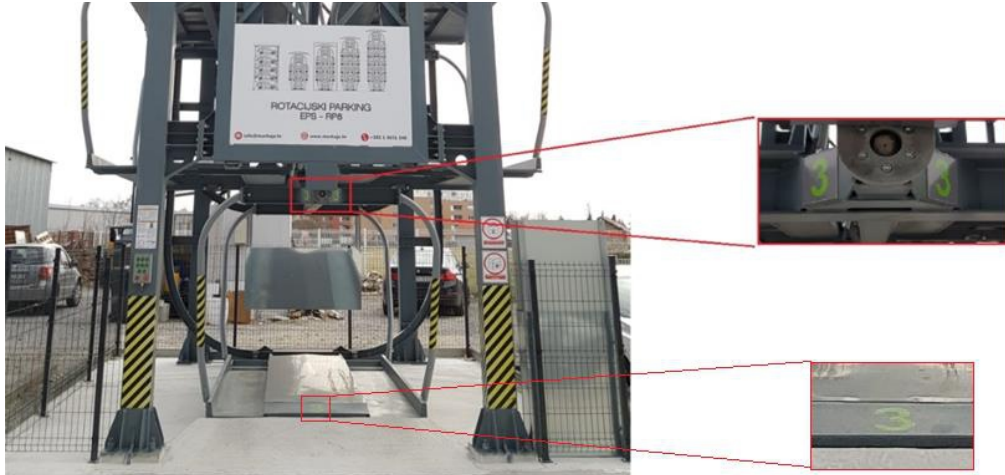


Figure 7: Platform number marking – front side

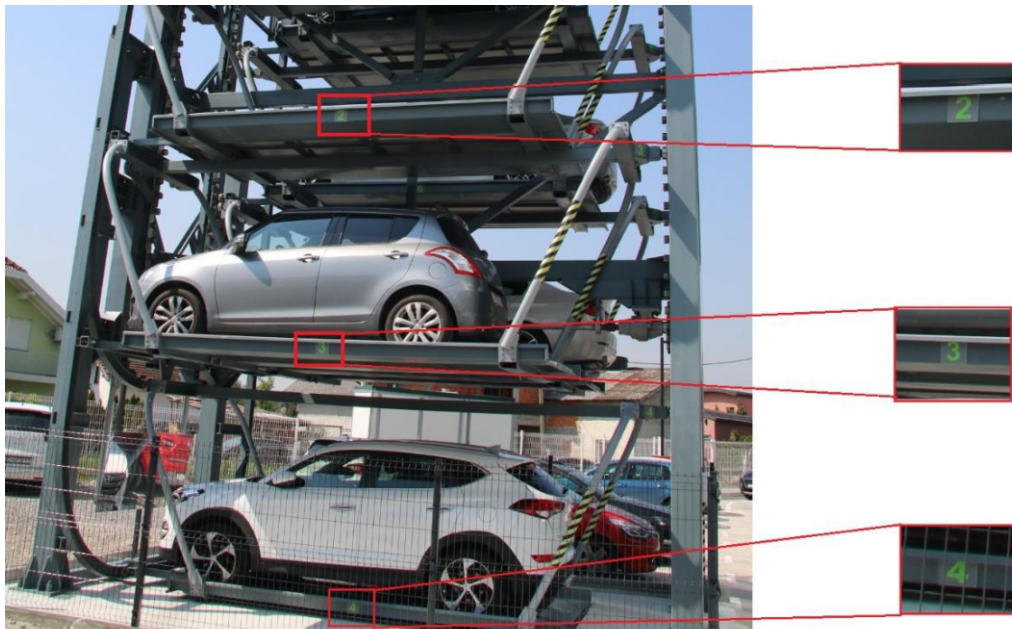


Figure 8: Platform number marking – side marking

When a designated platform is called, the green button is lit until the called platform reaches the lowest position on the rotary parking at level 0. When the green light turns off, the selected platform has reached level 0 and it is ready to load or unload vehicles.

The green blinking of a single button on the control box indicates a platform that currently passes through a level 0 but is not intended to stop at that level.

After parking is complete, set the control key to position "0" and remove it from the control box to prevent unauthorized use and unwanted system start.